



## Application Note 0006 Changing the ReportBuilder™ Client UDL settings from a Windows Vista Machine

### **Problem:**

When attempting to change the ReportBuilder™ project database setting via the ReportBuilder™ Client UDL shortcuts;( either from the WorkSmart programs group or the ReportBuilder™ Client menu option), the new setting will not persist and defaults to the SampleProject.mdb file.

WorkSmart Automation has confirmed this to be a problem on Windows Vista machines and suggests the following workaround.

### **Workaround:**

Replace the existing RBServer.udl file with a new one and change its properties by right-clicking the file and choosing properties.


This file is installed on Windows Vista machines in:

**“C:\ProgramData\WorkSmart Automation\ADDINS\ReportBuilder”**


1. Rename the existing RBServer.udl file to old\_RBServer.udl
2. Create a new text document and rename it RBServer.udl  
Make sure you rename it to have the .udl extension. The file should be named *RBServer.udl*.  
You will need to confirm the renaming of the file.
3. Right-click on the new RBServer.udl file and choose properties.
4. From the Provider Tab of the RBServer.udl properties window, choose Microsoft Jet 4.0 OLE DB Provider. ReportBuilder™ UDL supports only Microsoft Jet 4.0 OLE DB.



# Application Note 0006 Changing the ReportBuilder™ Client UDL settings from a Windows Vista Machine

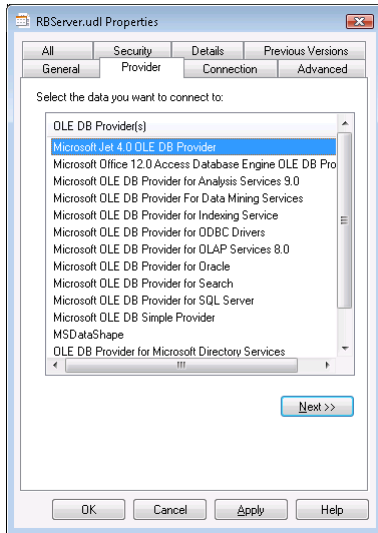

5. From the Connection Tab of the RBServer.udl properties window, click the ellipse (...) button to browse for your ReportBuilder™ project database.

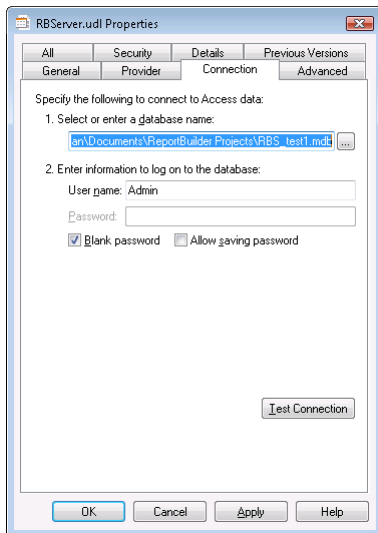

6. Select your ReportBuilder™ project database and then click Apply then click OK.
7. Restart Excel.